



## Variable Dump Assembly

<u>ITEM</u>	<u>REFERENCE</u>	<u>DESCRIPTION</u>
1	RB04/01	Retainer
2	RB04/02	Top
3	RB04/03	Adjusting Screw
4	RB04/04	Adjusting Ring
5	AP5A	Pull Knob
6	AP5B	String
7	AP5D	Spring
8	AP5E	Top Hat
9	AP5F	Sealing diaphragm
10	AP5G	Pip
11	AP5H	Non-return Diaphragm
12	AP15A	Protector Large
13	AP5J	Base