


Manual Inflator Assembly

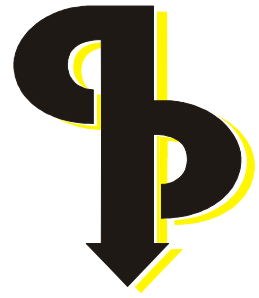

ITEM REFERENCE DESCRIPTION

1	RB05/01	Valve Body
2	RB05/02	'OXYGEN -O ² ' Sticker
	RB05/03	'DILUENT' Sticker
3	AP400/6	Side Stem
4	RB05/05	Insert
5	RB05/06	Spring
6	RB05/07	Button
7	AP15	Small Protector
8	AP35D	Lock Ring
9	AP35E	Cylinder Post Base
10	AP35L	Inner Lock Ring
11	AP400/3	Spindle
12	AP400/4	Filter
13	BS.006V75	O Ring BS 006 75 ⁰ Shore
14	BS.010V75	O Ring BS 010 75 ⁰ Shore
15	BS.010V75	O Ring BS 011 75 ⁰ Shore
16	BS.222V75	O Ring BS 222 75 ⁰ Shore

